

Monteringsanvisning - Assembly instruction


DUF Fyrkant T-gavel

DUF Square T-legs



 AB Edsbyverken, Box 300, SE-828 25 Edsbyn Tel/Phone +46 (0)271-27500, Fax +46 (0)271-27501 www.edsbyn.com	Date: 2009-03-05
	Nr: 00530154

1

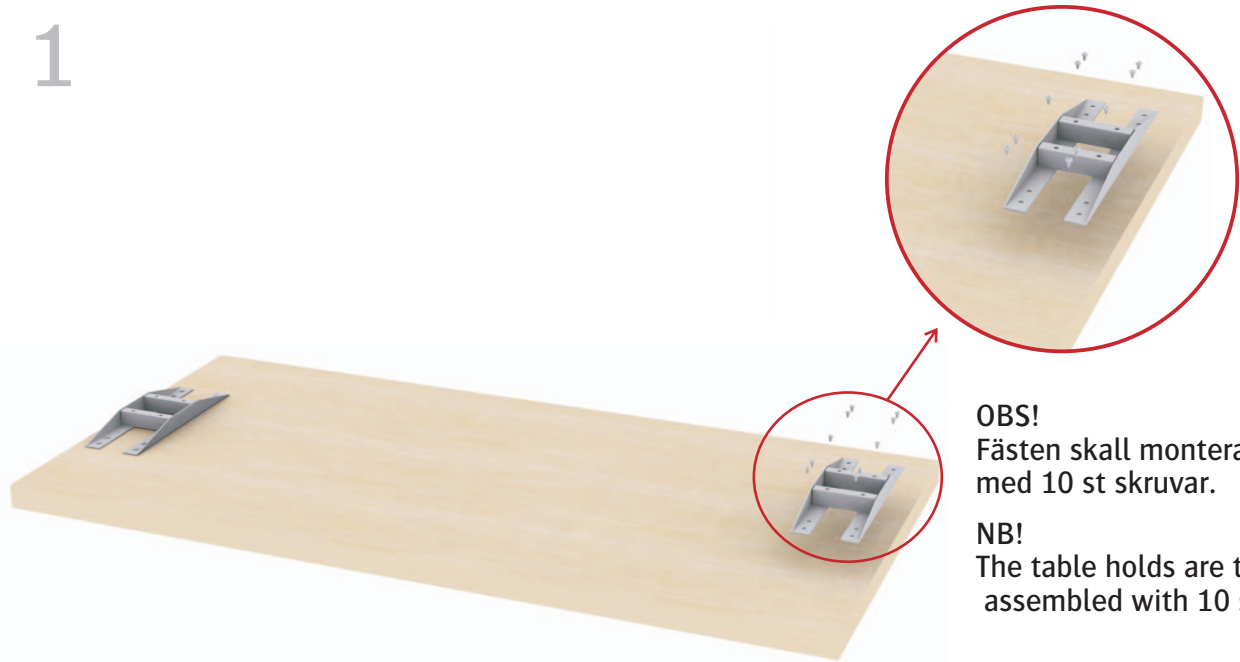

OBS!
Fästen skall monteras med 10 st skruvar.
NB!
The table holds are to be assembled with 10 screws.



2



Montera ihop foten och stolpen.
Assemble the foot with the pole.



Avsluta med att höjjustera bordet till anpassad sitthöjd med hjälp av benförlängaren med medföljande insexnyckel. Ställbar mellan 680 och 760 mm.

Finally adjust the height of the table to make sure that the table have the right seat height with the assistance of the legs adjustment with the included hexagon key. Adjustable between heights 680 and 760 mm.

3



Montera fast benen i bordsfästet med 4 st skruvar enligt bild.
Assemble the legs in the table hold with 4 screws according to the picture.



Vid behov
Avsluta med att justera så att bordet står plant med hjälp av ställfoten.

At need
Finally use the adjusting foot to get the table stand plane.